

## TO MECHANICAL FLOAT SWITCH CROSS REFERENCE NUMBERS

MERCURY PART #	DESCRIPTION	MECHANICAL PART #	DESCRIPTION
ELE15JSD	115V JUNIOR SINGLE	ELE15PMD1WP	115V PUMPMaster SINGLE
ELE15JSD-230	230V JUNIOR SINGLE	ELE15PMD2WP	230V PUMPMaster SINGLE
ELE15JSU	115V PUMP-UP SINGLE	ELE15PMU1WP	115V PUMP-UP SINGLE
ELE15JSU-230	230V PUMP-UP SINGLE	ELE15PMU2WP	230V PUMP-UP SINGLE
ELE20JSU-230	230V PUMP-UP SINGLE	ELE20PMU2WP	230V PUMP-UP SINGLE
ELE20JSD	115V JUNIOR SINGLE	ELE20PMD1WP	115V PUMPMaster SINGLE
ELE15SSD	115V SUPER SINGLE	ELE15PMPD1WP	115V PUMPMaster PLUS
ELE15SSD-230	230V SUPER SINGLE	ELE15PMPD2WP	230V PUMPMaster PLUS
ELE15DFD	115V DOUBLE	ELE15DFMMD1WP	115V DOUBLE MASTER
ELE15DFD-230	230V DOUBLE	ELE15DFMMD2WP	230V DOUBLE MASTER
ELE15SWINO	115V SENSOR FLOAT	ELE15SGMWENO	115V SIGNALMASTER
ELE15PCNO	115V SENSOR FLOAT	ELE15SGMPCNO	115V SIGNALMASTER
ELE20PCNO	115V SENSOR FLOAT	ELE20SGMPCNO	115V SIGNALMASTER